



Host Controller Interface

Host Controller Interface

This is the HCI_Version parameter used in the HCI_Read_Local_Version_Information command.

Parameter Name	Assigned Values	
HCI_Version	0	<i>Bluetooth</i> Core Specification 1.0b
	1	<i>Bluetooth</i> Core Specification 1.1
	2	<i>Bluetooth</i> Core Specification 1.2
	3	<i>Bluetooth</i> Core Specification 2.0 + EDR
	4	<i>Bluetooth</i> Core Specification 2.1 + EDR
	5	<i>Bluetooth</i> Core Specification 3.0 + HS
	6 - 255	Reserved

Table 1: The HCI Version.

[Document Tools](#)

© 2009 Bluetooth SIG all rights reserved