

Manual Reference

AT Command Set (GSM 07.07, GSM 07.05, Siemens specific commands)

for the SIEMENS Mobile Phone

S25

The command descriptions or example sequences in this document imply no liability or warranty in any way. The author therefore will take no responsibility and will accept no liability which results of using the content of this document in any way.

All rights reserved. No part of this work covered by the copyrights hereof may be reproduced or copied in any form or by any means (graphic, electronic, or mechanical, including photocopying, taping, or information storage and retrieval systems) without written permission of the publisher.

Revisions Overview

Date	Version	Name	Description of revision
06-10-1999	1.0	Kel	File split from former manual

Table of Contents

Revisions Overview..... 2

Table of Contents..... 2

1. Software Interface..... 3

 1.1. OVERVIEW OF THE SUPPORTED AT COMMAND SET..... 3

 1.2. AT COMMAND SET..... 5

 1.2.1. *Hayes-Standard Commands*..... 5

 1.2.2. *Acknowledgments for Normal Data Communication*..... 6

 1.3. AT COMMANDS AND RESPONSES ACCORDING TO GSM 07.07 AND GSM 07.05 7

 1.3.1. *AT Cellular Commands According to GSM 07.07*..... 7

 1.3.2. *AT Commands According to GSM 07.05 for SMS*..... 24

 1.3.3. *User-Defined Commands for Controlling the GSM Mobile Phone* 31

 1.3.4. *Summary of All Unexpected Messages*..... 42

APPENDIX A..... 43

Features of the Telephone-Book Memory..... 43

Writing to the FDN Phonebook / FDN Replacement 45

Special hints for using +CPBR/+CPBW command 46

APPENDIX B..... 48

Example for creating/interrogation of an organizer entry..... 48

1. Software Interface

1.1. Overview of the Supported AT Command Set

Page	Commands 07.07	Function
7	AT+CGMI	Issue manufacturer ID code
7	AT+CGMM	Issue model ID code
7	AT+CGMR	Output the GSM telephone version
8	AT+CGSN	Output the serial number (IMEI)
8	AT+GSN	Output the serial number (IMEI)
8	AT+CHUP	Terminate call
8	AT+CEER	Query the reason for disconnection of last call
9	AT+CREG	Power status
9	AT+COPS	Commands concerning selection of network operator
10	AT+CLCK	Switch locks on and off
10	AT+CPWD	Change password to a lock
11	AT+CLIP	Display telephone number of calling party
11	AT+CCFC	Call forwarding
12	AT+CHLD	Call hold and multiparty
12	AT+CPAS	Query the telephone status
13	AT+CPIN	Enter PIN and query lock
13	AT+CBC	Battery charge
14	AT+CSQ	Output signal quality
14	AT+CPBS	Select a telephone book
15	AT+CPBR	Read a telephone-book entry
15	AT+CPBW	Write a telephone-book entry
16	AT+CMEE	Expanded error messages according to GSM 07.07
17	AT+VTS	Send a DTMF tone
18	AT+VTD	Set duration of a DTMF tone
18	AT+WS46	Select wireless network
18	AT+CSCS	Select TE character set
19	AT+CAOC	Advice of charge
19	AT+CSSN	Supplementary service notifications
20	AT+CRSM	Restricted SIM access
20	AT+CIMI	Output of IMSI
21	AT+CACM	Accumulated call meter
21	AT+CAMM	Accumulated call meter maximum
22	AT+CLCC	List Current Calls
23	AT+CCLK	Clock
23	AT+COPN	Read operator names

Page	Commands 07.05	Function
24	AT+CSMS	Selection of message service
25	AT+CPMS	Selection of SMS memory
25	AT+CMGF	SMS format
26	AT+CSCA	Address of the SMS service center
26	AT+CNMI	Display new incoming SMS
27	AT+CNMA	Acknowledgment of a short message directly output
28	AT+CMGL	List SMS
29	AT+CMGR	Read in an SMS
29	AT+CMGS	Send an SMS
29	AT+CMSS	Send an SMS from the SMS memory
30	AT+CMGW	Write an SMS to the SMS memory
30	AT+CMGD	Delete an SMS in the SMS memory
30	AT+CSCB	Select cell broadcast messages
30	AT+CMGC	Send an SMS command

Page	Siemens-specific commands	Function
31	AT^SPBS	Select a telephone book (including Siemens-specific books)
31	AT^SDL	Delete the "last number redial" memory
31	AT^SPBC	Seek the first entry in the sorted telephone book which begins with the selected (or next available) letter
32	AT^SPBG	Read entry from the sorted telephone book via the sorted index
33	AT^SLCK	Switch locks (including user-defined locks) on and off
33	AT^SPWD	Change password to a lock (including user-defined locks)
34	AT^SACM	Output ACM (accumulated call meter) and ACMmax
34	AT^SPLM	Read the PLMN
34	AT^SPLR	Read an entry from the preferred-operator list
34	AT^SPLW	Write an entry to the preferred-operator list
35	AT^SCNI	Output call number information
34	AT^SNFV	Set the volume
35	AT^SNFS	Select NF hardware
36	AT^SRTC	Set the ringing tone
36	AT^SCID	Output card ID
36	AT^SCKS	Output SIM card status
37	AT^SPIC	Output PIN counter
37	AT^SMGO	SMS overflow indicator
38	AT^SMGL	List SMS (without status change from <i>unread</i> to <i>read</i>)
38	AT^SMSO	Switch device off
38	AT^SLNG	Language settings
39	AT^SSTK	SIM Toolkit
39	AT^SBNW	Binary Write
41	AT^SBNR	Binary Read

1.2. AT Command Set

Remote control operation of the GSM mobile telephone runs via a serial interface (data cable or infrared connection), where AT+C commands according to ETSI GSM 07.07 and GSM 07.05 specification as well as several manufacturer specific AT commands are available. These commands are described in more detail later on.

The modem guideline V.25ter applies to the sequence of the interface commands. According to this guideline, commands should begin with the character string "AT" and end with "<CR>" (= 0x0D). The input of a command is acknowledged by the display of "OK" or "ERROR". **A command currently in process is interrupted by each additional character entered.** This means that you should not enter the next command until you have received the acknowledgment; otherwise the current command is interrupted.

The commands supported are listed in the following tables:

1.2.1. Hayes-Standard Commands

The Hayes-standard commands correspond to the commands of AT Hayes-compatible modems.

Command	Function
A/	Repeat last command
AT...	Prefix for all other commands
ATA	Accept call
ATD<str>;	Dial the dialing string <str> with the voice utility Valid dial modifiers: "T" (tone dialing), "P" (pulse dialing) is ignored. The character ";" is important, for this tells the phone that the call should be set up with the voice utility. Otherwise an attempt is made to set up a data call, which the phone immediately acknowledges with "ERROR".
ATD><n>;	Dial the telephone number from the current telephone book location number <n> The telephone book is selected with the command at+cpbs (or at^spbs).
ATD><mem><n>;	Dial the telephone number from the telephone book <mem> location number <n>
ATDL	Dial last telephone number
ATE0	Deactivate command echo
ATE1	Activate command echo
ATH[0]	Separate connection
ATQ0	Display acknowledgments
ATQ1	Suppress acknowledgments
ATV0	Output acknowledgments as numbers
ATV1	Output acknowledgments as text
AT&F[0]	Reset to stored profile
AT&V	Display active and stored profiles
ATZ	Set to default configuration

Command	Function
AT+GCAP	Output the capabilities list

1.2.2. Acknowledgments for Normal Data Communication

Response	Numeric	Meaning
OK	0	Command executed, no errors
RING	2	Ring detected
NO CARRIER	3	Link not established or disconnected
ERROR	4	Invalid command or command line too long
NO DIALTONE	6	No dial tone, dialing impossible, wrong mode
BUSY	7	Remote station busy

1.3. AT Commands and Responses According to GSM 07.07 and GSM 07.05

According to GSM, it is possible to execute an AT command in various forms.

Test command	AT+CXXX=?	The telephone responds by sending the list of parameters and value ranges; these can be set using the affiliated Write command or by means of internal processes.
Read command	AT+CXXX?	This command tells you the current value setting of the parameter(s).
Write command	AT+CXXX=<...>	This command is used to set parameters that can be set.
Execute command	AT+CXXX	The Execute command reads non-settable parameters which are influenced by internal processes in the telephone.

1.3.1. AT Cellular Commands According to GSM 07.07

AT+CGMI		Issue manufacturer ID code
Test command AT+CGMI=?	Response OK	
Execute command AT+CGMI	Response <manufacturer> Parameter <manufacturer> Name of manufacturer (SIEMENS)	
Important: There is a leading output prefix +CGMI in models before the S25.		

AT+CGMM		Issue model ID code
Test command AT+CGMM=?	Response OK	
Execute command AT+CGMM	Response <model> Parameter <model> Name of telephone (MOBILE)	
Important: There is a leading output prefix +CGMM in models before the S25.		

AT+CGMR		Output the GSM telephone version
Test command AT+CGMR=?	Response OK	
Execute command AT+CGMR	Response <revision> Parameter <revision> Version of the telephone software	
Important: There is a leading output prefix +CGMR in models before the S25.		

AT+CGSN		Output the serial number (IMEI)	
Test command AT+CGSN=?	Response OK		
Execute command AT+CGSN	Response <sn> Parameter <sn>	IMEI of the telephone	
Important: There is a leading output prefix +CGMI in models before the S25.			

AT+GSN		Output the serial number (IMEI)	
Test command AT+GSN=?	Response OK		
Execute command AT+GSN	Response +GSN: <sn> Parameter <sn>	IMEI of the telephone	
Important: The output prefix +GSN may be missing in future versions.			

AT+CHUP		Terminate call	
Test command AT+CHUP=?	Response OK		
Execute command AT+CHUP	Response OK/ERROR		
	Description:	All active calls and all calls on hold are terminated.	

AT+CEER		Query the reason for disconnection of last call	
Test command AT+CEER=?	Response OK		
Execute command AT+CEER	Response +CEER: <report> Parameter <report>	Disconnection reason reported as number	

AT+CREG	Power status																		
Test command AT+CREG=?	Response +CREG: (list of supported <n>s) OK/ERROR/+CME ERROR																		
	Parameter <table border="0"> <tr> <td style="padding-right: 20px;"><n></td> <td style="padding-right: 20px;">0</td> <td>Suppresses the unexpected network-status messages</td> </tr> <tr> <td></td> <td>1</td> <td>Displays the unexpected network-status messages</td> </tr> </table> OK/ERROR/+CME ERROR	<n>	0	Suppresses the unexpected network-status messages		1	Displays the unexpected network-status messages												
<n>	0	Suppresses the unexpected network-status messages																	
	1	Displays the unexpected network-status messages																	
Read command AT+CREG?	Response +CREG: <n>,<stat>[,<lac>,<ci>] OK/ERROR/+CME ERROR																		
	Parameter <table border="0"> <tr> <td style="padding-right: 20px;"><n></td> <td>See Test command</td> </tr> <tr> <td style="padding-right: 20px;"><stat></td> <td>0 Not checked in, not seeking</td> </tr> <tr> <td></td> <td>1 Checked in</td> </tr> <tr> <td></td> <td>2 Not checked in, but seeking a network</td> </tr> <tr> <td></td> <td>3 Check-in denied by network</td> </tr> <tr> <td></td> <td>4 Unknown</td> </tr> <tr> <td></td> <td>5 Registered, roaming</td> </tr> <tr> <td style="padding-right: 20px;"><lac></td> <td>Hexadecimal 2-byte string type of location area code</td> </tr> <tr> <td style="padding-right: 20px;"><ci></td> <td>Hexadecimal 2-byte string type of cell ID</td> </tr> </table>	<n>	See Test command	<stat>	0 Not checked in, not seeking		1 Checked in		2 Not checked in, but seeking a network		3 Check-in denied by network		4 Unknown		5 Registered, roaming	<lac>	Hexadecimal 2-byte string type of location area code	<ci>	Hexadecimal 2-byte string type of cell ID
<n>	See Test command																		
<stat>	0 Not checked in, not seeking																		
	1 Checked in																		
	2 Not checked in, but seeking a network																		
	3 Check-in denied by network																		
	4 Unknown																		
	5 Registered, roaming																		
<lac>	Hexadecimal 2-byte string type of location area code																		
<ci>	Hexadecimal 2-byte string type of cell ID																		
Write command AT+CREG=<n>	Parameter <n> See Test command Response OK/ERROR/+CME ERROR																		
	Unexpected message +CREG: <stat>																		

AT+COPS	Commands concerning selection of network operator												
Test command AT+COPS=?	Response +COPS: [list of supported (<stat>,long alphanumeric <oper>,,numeric <oper>)][,,(list of supported <mode>s),(list of supported <format>s)] OK/ERROR/+CME ERROR Parameter <table border="0"> <tr> <td style="padding-right: 20px;"><stat></td> <td>0 Unknown</td> </tr> <tr> <td></td> <td>1 Useful network operator</td> </tr> <tr> <td></td> <td>2 Used network operator</td> </tr> <tr> <td></td> <td>3 Prohibited network operator</td> </tr> </table> <oper> Operator in the format according to <mode>	<stat>	0 Unknown		1 Useful network operator		2 Used network operator		3 Prohibited network operator				
<stat>	0 Unknown												
	1 Useful network operator												
	2 Used network operator												
	3 Prohibited network operator												
Read command AT+COPS?	Response +COPS: <mode>[,<format>,<oper>] OK/ERROR/+CME ERROR Parameter <table border="0"> <tr> <td style="padding-right: 20px;"><mode></td> <td>0 Automatic mode</td> </tr> <tr> <td></td> <td>1 Manual selection of network operator</td> </tr> <tr> <td></td> <td>3 Setting of format</td> </tr> <tr> <td></td> <td>4 Automatic, manual selected</td> </tr> <tr> <td style="padding-right: 20px;"><format></td> <td>0 Long alphanumeric</td> </tr> <tr> <td></td> <td>2 Numeric <oper></td> </tr> </table> <oper> Network operator	<mode>	0 Automatic mode		1 Manual selection of network operator		3 Setting of format		4 Automatic, manual selected	<format>	0 Long alphanumeric		2 Numeric <oper>
<mode>	0 Automatic mode												
	1 Manual selection of network operator												
	3 Setting of format												
	4 Automatic, manual selected												
<format>	0 Long alphanumeric												
	2 Numeric <oper>												
Write command AT+COPS=<mode> [,<format>[,<oper>]]	Parameter <mode> See Read command <format> See Read command If <mode> = 1, <format> can only = 2 <oper> In numeric form only Response OK/ERROR/+CME ERROR												

AT+CLCK	Switch locking on and off Revision to GSM 07.07 according to CR TDOC ETSI/SMG4 187/96
<p>Test command AT+CLCK=?</p>	<p>Response +CLCK: (list of supported <fac>s) OK/ERROR/+CME ERROR</p> <p>Parameter <fac></p> <ul style="list-style-type: none"> "CS" Keyboard lock "PS" Phone locked to SIM (device code) "SC" SIM card (PIN) "FD" FDN lock "AO" BAOC (bar all outgoing calls) "OI" BOIC (bar outgoing international calls) "OX" BOIC-exHC (bar outgoing international calls except to home country) "AI" BAIC (bar all incoming calls) "IR" BIC-Roam (bar incoming calls when roaming outside the home country) "AB" All Barring services "AG" All outgoing barring services "AC" All incoming barring services
<p>Write command AT+CLCK=<fac>, <mode>[, <passwd> [,<class>]]</p>	<p>Parameter</p> <ul style="list-style-type: none"> <fac> See Test command <mode> 0 Cancels lock 1 Activates lock 2 Queries lock status <passwd> Password <class> 1 Voice 2 Data 4 Fax 7 All classes (default value) <p>Response If <mode>=2 and command is successful +CLCK: <status>[,<class1>[<CR><LF> +CLCK: <status>, class2....]]</p> <p>Parameter</p> <ul style="list-style-type: none"> <status> 0 On 1 Off <p>OK/ERROR/+CME ERROR</p>

AT+CPWD	Change password to a lock
<p>Test command AT+CPWD=?</p>	<p>Response +CPWD: list of supported (<fac>, <pwdlength>)s OK/ERROR/+CME ERROR</p> <p>Parameter</p> <ul style="list-style-type: none"> <fac> "P2" PIN2 otherwise See Test command for AT+CLCK command, without "FD" <pwdlength> Password length
<p>Write command AT+CPWD=<fac>, <oldpwd>, <newpwd></p>	<p>Parameter</p> <ul style="list-style-type: none"> <fac> See Test command for AT+CLCK command <oldpwd>, <newpwd> Old and new password <p>Response OK/ERROR/+CME ERROR</p>

AT+CLIP		Display telephone number of calling party	
Test command AT+CLIP=?	Response +CLIP: (list of supported <n>s) OK/ERROR/+CME ERROR	Parameter <n>	0 Suppresses the unexpected messages 1 Displays the unexpected messages
Read command AT+CLIP?	Response +CLIP: <n>, <m> OK/ERROR/+CME ERROR	Parameter <n> <m>	See Test command 0 CLIP not booked 1 CLIP booked 2 Unknown
Write command AT+CLIP=<n>	Parameter <n>	See Read command	
	Response OK/ERROR/+CME ERROR		
	Unexpected message +CLIP: <num>,<type>	Telephone number of caller	

AT+CCFC		Call forwarding	
Test command AT+CCFC=?	Response +CCFC: (list of supported <reas>s) OK/ERROR/+CME ERROR	Parameter <reas>	0 Always 1 If busy 2 If no answer 3 If not available 4 All reasons (0-3) 5 All conditional reasons (1-3)
Write command AT+CCFC=<reas>,<mode>[, <num>[, <type>[, <class>[, <time>]]]]	Parameter <reas> <mode> <num> <type> <class> <time>	See Test command 0 Deactivate 1 Activate 2 Query 3 Install 4 Delete Telephone number Type of telephone number 1 Voice 2 Data 4 Fax 7 All classes 1-30 Time, rounded to a multiple of five seconds	
	Response If <mode>=2 and command is successful +CCFC: <status>, <class1>[, <num>, <type>[, <time>]] [<CR><LF>+CCFC:] OK/ERROR/+CME ERROR	Parameter <status>	0 Not active 1 Active

AT+CHLD		Call hold and multiparty	
Test command AT+CHLD=?	Response +CHLD: (list of supported <n>s) OK/ERROR/+CME ERROR		
Write command AT+CHLD= [<n>]	Parameter <n>	0	Terminates all held calls or sets UDUB (U ser D etermined U ser B usy) for a waiting call
		1	Terminates all active calls (if there are any) and accepts the other call (waiting call or held call)
		1X	Terminates call number X (X= 1-7)
		2	Puts all active calls on hold (if there are any) and accepts the other call (waiting call or held call) as active
		2X	Puts all active calls except call X (X= 1-7) on hold
		3	Connects the call put on hold to the active call
	For terminating		Terminating all calls except waiting calls is done with "AT+CHUP"
	Note:		Command scope depends on the SIM clearing and/or on the network support
	Response OK/ERROR/+CME ERROR		

AT+CPAS		Query the telephone status	
Test command AT+CPAS=?	Response +CPAS: (list of supported <pas>s) OK/ERROR/+CME ERROR		
	Parameter <pas>	0	Ready
		3	Incoming call (phone is ringing)
		4	Call is active
Execute command AT+CPAS	Response +CPAS: <pas> OK/ERROR/+CME ERROR		
	Parameter <pas>		See Test command
	OK/ERROR/+CME ERROR		

AT+CPIN		Enter PIN and query lock	
Test command AT+CPIN=?	Response OK		
Read command AT+CPIN?	Response +CPIN: <code> OK/ERROR/+CME ERROR	Parameter <code>	
		READY	No further input necessary
		SIM PIN	SIM PIN input necessary
		SIM PUK	SIM PUK input necessary
		PH-SIM PIN	Device-code (theft protection) input necessary
		PH-SIM PUK	Device-code PUK (theft protection) input necessary
		SIM PIN2	PIN2, e.g. for editing the FDN book; only possible if previous command was acknowledged with +CME ERROR:17
		SIM PUK2	Only possible if previous command was acknowledged with error +CME ERROR:18
		The required error message can (must) be provoked by an attempted Write command.	
Write command AT+CPIN=<pin> [,<new pin>]	Parameter <pin>		Password for appropriate lock; if the lock is a PUK, then a <new pin> is necessary.
	<new pin>		New password for the lock
	Response OK/ERROR/+CME ERROR		

AT+CBC		Battery charge	
Test command AT+CBC=?	Response +CBC: (list of supported <bcs>s),(list of supported <bcl>s) OK/ERROR/+CME ERROR	Parameter <bcs>	
		0	ME is supplied from battery
		1	ME has battery but is not supplied from there
		2	ME has no battery connected
		3	Error
		0	Battery is flat, but no more actions possible
		<bcl>	1-100 charge in per cent
Execute command AT+CBC	Response +CBC: <bcs>,<bcl>		

AT+CSQ	Output signal quality
Test command AT+CSQ=?	Response +CSQ: (list of supported <rssi>s), list of supported <ber>) OK/ERROR/+CME ERROR Parameter <rssi> Reception level: 0 -113 dBm or less 1 -111 dBm 2-30 -109 to -53 dBm 31 -51 dBm or more 99 Unknown <ber> Bit error rate: 0-7 Like RXQUAL values from Table GSM 05.08 in Section 8.2.4 99 Unknown
Execute command AT+CSQ	Response +CSQ: <rssi>, <ber> OK/ERROR/+CME ERROR Parameter <rssi> See Test command <ber> See Test command

AT+CPBS	Select a telephone book
Test command AT+CPBS=?	Response +CPBS: (list of supported <sto>s) OK/ERROR/+CME ERROR Parameter <sto> "FD" SIM fix-dialing phonebook "SM" SIM phonebook "ME" ME phonebook "DC" ME Dialed Calls List "ON" SIM (or ME) own numbers (MSISDNs) list "LD" SIM last-dialling phonebook "MC" ME missed (unanswered received) calls list "RC" ME received calls list *For description of telephone-book features, see <i>Appendix A</i> Note: "DC" and "LD" are never both available.
Read command AT+CPBS?	Response +CPBS: <sto> OK/ERROR/+CME ERROR Parameter <sto> See Test command
Write command AT+CPBS=<sto>	Parameter <sto> See Test command Response OK/ERROR/+CME ERROR

AT+CPBR	Read a telephone-book entry
Test command AT+CPBR=?	Response +CPBR: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR Parameter <index> Location number <nlength> Max. length of telephone number <tlength> Max. length of text corresponding to the number
Write command AT+CPBR= <index1> [,<index2>]	Response +CPBR: <index1>, <nummer>, <typ>, <text>[<CR><LF> +CPBR: +CPBR: <index2>, <nummer>, <typ>, <text>] OK/ERROR/+CME ERROR Parameter <index1> Location number where the read of the entry starts <index2> Location number where the read of the entry ends <nummer> Telephone number <typ> Type of number <text> Text corresponding to the telephone number NOTE: In the <text> field, there may appear special characters like `"` (0x22), `@` (0x00), `o` (0x08), `O` (0x5c). (See also +CPBW and Appendix A: Special hints for using +CPBR/+CPBW command) In models before the S25, empty phonebook records are reported as follows: +CPBR: <index1>,empty In S25ff, those empty entries don't produce any output.

AT+CPBW	Write a telephone-book entry																														
Test command AT+CPBW=?	Response +CPBW: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR Parameter <index> Location number <nlength> Max. length of telephone number <tlength> Max. length of text corresponding to the number																														
Write command AT+CPBW= [<index>] [,<nummer> [,<typ>[,<text>]]]	Parameter <index> Location number at which the entry is written <nummer> Telephone number <typ> Type of number <text> Text corresponding to the telephone number Response OK/ERROR/+CME ERROR Note: The following characters in <text> must be entered via the escape sequence (see also Appendix A: Special hints for using +CPBR/+CPBW command) <table border="1" style="margin-top: 10px; width: 100%;"> <thead> <tr> <th>GSM Char</th> <th>Hex char.</th> <th>ASCII</th> <th>GSM Esc Seq</th> <th>Seq.(hex)</th> <th>Note</th> </tr> </thead> <tbody> <tr> <td>Ö</td> <td>5C</td> <td>\</td> <td>Ö5C</td> <td>5C 35 43</td> <td>Backslash</td> </tr> <tr> <td>"</td> <td>22</td> <td>"</td> <td>Ö22</td> <td>5C 32 32</td> <td>String delim</td> </tr> <tr> <td>o</td> <td>08</td> <td>BSP</td> <td>Ö08</td> <td>5C 30 38</td> <td>Backspace</td> </tr> <tr> <td>@</td> <td>00</td> <td>NULL</td> <td>Ö00</td> <td>5C 30 30</td> <td>GSM Null</td> </tr> </tbody> </table> y cause problems on application level when using the function strlen() and should thus be represented by an escape sequence	GSM Char	Hex char.	ASCII	GSM Esc Seq	Seq.(hex)	Note	Ö	5C	\	Ö5C	5C 35 43	Backslash	"	22	"	Ö22	5C 32 32	String delim	o	08	BSP	Ö08	5C 30 38	Backspace	@	00	NULL	Ö00	5C 30 30	GSM Null
GSM Char	Hex char.	ASCII	GSM Esc Seq	Seq.(hex)	Note																										
Ö	5C	\	Ö5C	5C 35 43	Backslash																										
"	22	"	Ö22	5C 32 32	String delim																										
o	08	BSP	Ö08	5C 30 38	Backspace																										
@	00	NULL	Ö00	5C 30 30	GSM Null																										

AT+CMEE	Expanded error messages according to GSM 07.07
Test command AT+CMEE=?	Response +CMEE: (list of supported <n>s) Parameter <n> 0 Suppresses the expanded error format 1 Expanded error messages as number 2 Expanded error messages as text
Read command AT+CMEE?	Response +CMEE: <n> Parameter <n> See Read command
Write command AT+CMEE=<n>	Parameter <n> See Read command Response OK/ERROR/+CME ERROR
	Description: The following CME errors are possible: 0 PHONE FAILURE 1 NO CONNECTION TO PHONE 2 PH-TA LINK RESERVED 3 OPERATION NOT ALLOWED 4 OPERATION NOT SUPPORT 5 PH-SIM PIN REQUIRED 10 SIM NOT INSERTED 11 SIM PIN REQUIRED 12 SIM PUK REQUIRED 13 SIM FAILURE 14 SIM BUSY 15 SIM WRONG 16 INCORRECT PASSWORD 17 SIM PIN2 REQUIRED 18 SIM PUK2 REQUIRED 20 MEMORY FULL 21 INVALID INDEX 22 NOT FOUND 23 MEMORY FAILURE 24 TEXT TOO LONG 25 INV CHAR IN TEXT 26 DIAL STRING TOO LONG 27 INV CHAR IN DIAL 30 NO NETWORK SERVICE 31 NETWORK TIMEOUT 100 UNKNOWN 512 CALL BARRED BY BLACKLIST 513 PHONE LINK RESERVED 514 INVALID DIAL STRING 515 PHONE BUSY 550 PH-SIM PUK REQUIRED 551 NTF-SIM PIN REQUIRED 552 NTF-SIM PUK REQUIRED 553 PH-NET PIN REQUIRED 554 PH-NET PUK REQUIRED 555 PH-SP PIN REQUIRED 556 PH-SP PUK REQUIRED 557 PH-CP PIN REQUIRED 558 PH-CP PUK REQUIRED 559 FEATURE PIN REQUIRED 560 FEATURE PUK REQUIRED

	<p>The following CMS errors have been defined for SMS:</p> <p>300 ME failure 301 SMS service of ME reserved 302 operation not allowed 303 operation not supported 304 invalid PDU parameter 305 invalid TEXT mode 310 SIM not inserted 311 SIM PIN necessary 312 PH-SIM PIN necessary 313 SIM failure 314 SIM busy 315 SIM wrong 320 memory failure 321 invalid memory failure 322 memory full 330 SMSC address unknown 331 no network service 332 network timeout 340 NO +CNMA ACK EXPECTED 500 unknown error</p>
--	---

AT+VTS	Send a DTMF tone
<p>Test command AT+VTS=?</p>	<p>Response +VTS: <dtmf>,<duration> OK/ERROR/+CME ERROR</p> <p>Parameter <dtmf> 0-9,#,*,A-D, exactly one character <duration> Duration of tone in (duration/10) seconds</p>
<p>Write command AT+VTS= <dtmf> [,<duration>] or AT+VTS= <dtmf-string></p>	<p>Parameter <dtmf> One character from the list, see Test command See Test command <dtmf-string> max. 29 characters in quotation marks ("..."), then a duration cannot be specified</p> <p>Response OK/ERROR/+CME ERROR</p> <p>Important: There is a leading output prefix +VTS in models before the S25.</p>

AT+VTD		Set duration of a DTMF tone	
Test command AT+VTD=?	Response +VTD: (list of supported <duration>s) OK/ERROR/+CME ERROR	Parameter <duration>	1-255 Duration of tone in (duration/10) seconds
Read command AT+VTD?	Response +VTD: <duration> OK/ERROR/+CME ERROR		
Write command AT+VTD= <duration>	Parameter <duration>	See Test command	
	Response OK/ERROR		
Important: There is a leading output prefix +VTD in models before the S25.			

AT+WS46		Select wireless network	
Test command AT+WS46=?	Response +WS46: (list of supported <n>s) OK		
Read command AT+WS46?	Response +WS46: <n> OK/ERROR/+CME ERROR	Parameter <n>	Integer; WDS side stack 12 GSM digital cellular
Write command AT+WS46=[<n>]	Response OK/ERROR/+CME ERROR		
Important: There is a leading output prefix +WS46 in models before the S25.			

AT+CSCS		Select TE character set	
Test command AT+CSCS=?	Response +CSCS: (list of supported <chset>s) OK		
Read command AT+CSCS?	Response +CSCS: <chset> OK/ERROR/+CME ERROR	Parameter <chset>	String; determines which TE character set is used
Write command AT+CSCS= [<chset>]	Response OK/ERROR/+CME ERROR		

AT+CAOC	Advice of charge
Test command AT+CAOC=?	Response OK
Execute command AT+CAOC	Response +CAOC: <ccm> OK/ERROR/+CME ERROR Parameter <ccm> Updated hexadecimal call meter, measured in home units; coding analogous to ACMmax on the SIM

AT+CSSN	Supplementary service notifications Revision according to GSM 07.07 Version 5.0.0
Test command AT+CSSN=?	Response +CSSN: (list of supported <n>s), (list of supported <m>s) Parameter <n> 0 Suppresses the +CSSI messages 1 Activates the +CSSI messages <m> 0 Suppresses the +CSSU messages 1 Activates the +CSSU messages For supported +CSSI/+CSSU messages, see also 1.3.4. Summary of All Unexpected Messages
Read command AT+CSSN?	Response +CSSN: <n>,<m> Parameter <n> See Test command <m> See Test command
Write command AT+CSSN=<n>[,<m>]	Parameter <n> See Read command <m> See Read command
	Unexpected message +CSSI: <code1> +CSSU: <code2> Parameter <code1> Intermediate result code 3 Waiting call is pending <code2> Unsolicited result code 5 Held call was terminated

AT+CRSM		Restricted SIM access	
Test command AT+CRSM=?	Response OK		
Write command +CRSM=<command> [,<fileid> [,<P1>,<P2>,<P3> [,<data>]]]	Response +CRSM: <sw1>,<sw2>[,<response>] OK/ERROR/+CME ERROR	Parameter	
		<command>:	178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS
		<fileid>:	Integer, identifier of the data file on the SIM, mandatory for every command except STATUS (see GSM 11.11)
		<P1>, <P2>, <P3>:	Integer, transferal parameter from ME to SIM, mandatory for every command except GET RESPONSE,STATUS (see GSM 11.11)
		<data>:	Hexadecimal string; information that is to be written to the SIM
		<sw1>, <sw2>:	Integer; information from the SIM as to how/whether the command was executed
		<response>:	Hexadecimal string; given when a command was successfully processed
		Note:	The write access to CK boxes receives only limited support and differs from device to device.

AT+CIMI		Output of IMSI	
Test command AT+CIMI=?	Response OK		
Execute command AT+CIMI	Response <imsi>	Parameter	<imsi> International Mobile Subscriber Identity (IMSI)

AT+CACM	Accumulated call meter
Test command AT+CACM=?	Response OK
Read command AT+CACM?	Response +CACM: <acm> OK/ERROR/+CME ERROR Parameter <acm> Accumulated call meter in hexadecimal format, measured in home units; coding analogous to ACMmax on the SIM
Write command AT+CACM=[<passwd>]	Response OK/ERROR/+CME ERROR Parameter <passwd> String type; usually PIN2

AT+CAMM	Accumulated call meter maximum
Test command AT+CAMM=?	Response OK
Read command AT+CAMM?	Response +CAMM: <acmmax> OK/ERROR/+CME ERROR Parameter <acmmax> Accumulated call meter maximum in hexadecimal format, measured in home units; coding analogous to ACMmax on the SIM
Write command AT+CAMM=[<acmmax>[,<passwd>]]	Response OK/ERROR/+CME ERROR Parameter <acmmax> (see Read command) <passwd> String type; usually PIN2

AT+CLCC	List Current Calls
Test command AT+CLCC=?	Response OK
Execute command AT+CLCC	Response [+CLCC: <id1>,<dir>,<stat>,<mode>,<empty>,<number>,<type>] [<CR><LF>+CLCC: <id2>,<dir>,<stat>,<mode>,<empty>,<number>,<type> [...]] OK/ERROR/+CME ERROR Parameter <idx>: integer type; call identification number as described in GSM 02.30 [19] subclause 4.5.5.1; this number can be used in +CHLD command operations <dir>: 0 mobile originated (MO) call 1 mobile terminated (MT) call <stat> (state of the call): 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call) <mode> (bearer/teleservice): 0 voice 1 data 2 fax 3 voice followed by data, voice mode 4 alternating voice/data, voice mode 5 alternating voice/fax, voice mode 6 voice followed by data, data mode 7 alternating voice/data, data mode 8 alternating voice/fax, fax mode 9 unknown <empty>: 0 call is not one of multiparty (conference) call parties 1 call is one of multiparty (conference) call parties <number>: string type phone number in format specified by <type> <type>: type of address octet in integer format

AT+CCLK		Clock	
Test command AT+CCLK=?	Response OK		
Read command AT^SCLK?	Response +CCLK: <time> OK/ERROR/+CME ERROR	Parameter: <time>:	string type value; format is "yy/MM/dd, hh:mm:ss", where characters indicate year (two last digits), month, day, hour, minutes; E.g. 6th of May 1994, 22:10:00 hours equals to „94/05/06,22:10:00"
Write command AT+CCLK=<time>	Response OK/ERROR/+CME ERROR	Parameter: <time>	see Test commnd

AT+COPN		Read operator names	
Test command AT+COPN=?	Response OK		
Execute command AT+COPN	Response +COPN:numeric <oper>,long alphanumeric <oper><CR><LF> +COPN:..... OK/ERROR/+CME ERROR	Parameter <oper>	Network operator in numeric and alphanumeric notation see AT^SPLM

AT+CPMS	Selection of SMS memory Revision according to GSM 07.05 Version 4.7.0
Test command AT+CPMS=?	Response +CPMS: (list of supported <mem1>s),(list of supported <mem2>s) ,(list of supported <mem3>s) Parameter <mem1> Memory from which messages are read and deleted "SM" SIM-messages memory <mem2> Memory to which messages are written and sent "SM" SIM-messages memory <mem3> Memory in which received messages are stored, if forwarding to the PC is not set ("+CNMI") "SM" SIM-messages memory
Read command AT+CPMS?	Response +CPMS: <mem1>,<used1>,<total1>,<mem2>,<used2>,<total2> ,<mem3>,<used3>,<total3> Parameter <memx> Memory from which messages are read and deleted <usedx> Number of messages currently in <memx> <totalx> Number of storable messages in <memx>
Write command AT+CPMS= <mem1> [,<mem2> [,<mem3>]]	Parameter <mem1> See Test command <mem2> See Test command <mem3> See Test command Response +CPMS: <used1>,<total1>,<used2>,<total3>,<used3>,<total3> OK/ERROR/+CMS ERROR

AT+CMGF	SMS format
Test command AT+CMGF=?	Response +CMGF: (list of supported <mode>s) Parameter <mode>: 0 PDU mode
Read command AT+CMGF?	Response +CMGF: <mode> Parameter <mode>: 0 PDU mode
Write command AT+CMGF=[< mode>]	Parameter <mode>: 0 PDU mode Response OK/ERROR

AT+CSCA	Address of the SMS service center
Test command AT+CSCA=?	Response OK
Read command AT+CSCA?	Response +CSCA: <sca>,<tosca> Parameter <sca> Service-center address in string format <tosca> Service-center address format
Write command AT+CSCA= <sca>[,<tosca>]	Parameter <sca> Service-center address in string format <tosca> Service-center address format Response OK/ERROR

AT+CNMI	Display new incoming SMS Revision according to GSM 07.05 Version 4.7.0
Test command AT+CNMI=?	Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s) Parameter <mode> 0 Buffers unexpected messages (but is equivalent to rejecting; see <bfr>) 1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved. Otherwise forward them directly to the TE. (only with S25ff) 2 Buffers unexpected messages if serial interface is occupied, otherwise they are output (only models before S25) <mt> 0 Suppresses unexpected messages for incoming short messages 1 Unexpected messages of a received short message (SMS-DELIVER) that is stored on a chip card are output in the form +CMTI: <mem>,<index> 2 Unexpected messages of a received short message (SMS-DELIVER) (except class 2 and the message "Waiting Indication Group: store message") are output in the form +CMT: [<alpha>],<length><CR><LF><pdu> (<alpha> is not supported) Class 2 and the message "Waiting Indication Group: store message" are output as <mt>=1 3 Unexpected messages of a received short message (SMS-DELIVER) class 3 are output as <mt>=2. Messages with other data coding schemes are output as <mt>=1. NOTE: <mt>=2 and <mt>=3 are not possible unless the Phase 2+ compatibility has been activated by means of +CSMS=1 <bm> 0 Suppresses unexpected messages for incoming cell broadcast messages 2 Outputs unexpected messages for cell broadcast messages in the form +CBM: <length><CR><LF><pdu> <ds> 0 Suppresses unexpected messages for incoming SMS status reports 2 Outputs unexpected messages for SMS status

	<p>reports in the form +CDS: <length><CR><LF><pdu></p> <p><bfr> 1 Buffered unexpected messages are rejected when switching from <mode> 0 to <mode> 2.</p> <p><mem> See +CPMS <index> Index of the record on the chip card <alpha> alphanumeric representation of the sender address <length> Length of <pdu> <pdu> See +CMGL</p>
Read command AT+CNMI?	<p>Response +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr></p> <p>Parameter <mode> See Test command <mt> See Test command <bm> See Test command <ds> See Test command <bfr> See Test command</p>
Write command AT+CNMI= [<mode> [,<mt>[,<bm> [,<ds>[,<bfr>]]]]]	<p>Parameter <mode> See Test command <mt> See Test command <bm> See Test command <ds> See Test command <bfr> See Test command</p> <p>Response OK/ERROR/+CMS ERROR</p>
	<p>Unexpected message +CMTI: <mem>,<index> Indication that new message has arrived</p> <p>+CMT: ,<length><CR><LF><pdu> Direct output of the short message</p> <p>+CDS: <length><CR><LF><pdu> Direct output of the status report</p> <p>+CBM: <length><CR><LF><pdu> Direct output of the cell broadcast message</p>

AT+CNMA	<p>Acknowledgment of a short message directly output (without storing on the chip card) Revision according to GSM 07.05 Version 5.0.0 <i>(NOTE: This command is not possible unless the Phase 2+ compatibility has been activated by means of +CSMS=1)</i></p>
Test command AT+CNMA=?	<p>Response +CNMA: (list of supported <n>s)</p> <p>Parameter <n> 0 Mode of functioning analogous to GSM 07.05 text mode</p>
Write command AT+CNMA[=<n>]	<p>Parameter <n> See Test command</p> <p>Response OK/ERROR/+CMS ERROR: <err></p>

AT+CMGL	List SMS Revision according to GSM 07.05 Version 4.7.0
Test command AT+CMGL=?	Response +CMGL: (list of supported <stat>s) Parameter <stat> 0 "REC UNREAD": received unread messages (default) 1 "REC READ": received read messages 2 "STO UNSENT": stored unsent messages 3 "STO SENT": stored sent messages 4 "ALL": all messages
Write command AT+CMGL [=<stat>]	Parameter <stat> See Test command Response If PDU mode (+CMGF=0) and command are successful: +CMGL:<index>,<stat>,[<alpha>],<length> <CR><LF><pdu><CR><LF> +CMGL: <index>,<stat>,[alpha],<length> <CR><LF><pdu><CR><LF> [...]
	Parameter <pdu> The PDU begins with the service-center address (according to GSM04.11), followed by the TPDU according to GSM03.40 in hexadecimal format otherwise: +CMS ERROR: <err>

AT+CMGR	Read in an SMS Revision according to GSM 07.05 Version 4.7.0
Test command AT+CMGR=?	Response OK
Write command AT+CMGR= <index>	Parameter <index> Index of message in selected memory <mem1> Response If PDU mode (+CMGF=0) and command are successful: +CMGR: <stat>,<[alpha]>,<length><CR><LF><pdu> Parameter <pdu> Siehe "AT+CMGL" otherwise: +CMS ERROR: <err>

AT+CMGS	Send an SMS
Test command AT+CMGS=?	Response OK
Write command If PDU mode (+CMGF=0) +CMGS=<length><CR>PDU is given <ctrl-Z/ESC>	Parameter <length> Length of PDU <pdu> See "AT+CMGL" <mr> Message reference Response If sending is successful: +CMGS: <mr> If sending is not successful: +CMS ERROR: <err>

AT+CMSS	Send an SMS from the SMS memory
Test command AT+CMSS=?	Response OK
Write command +CMSS=<index>[,<da>[,<toda>]]	Parameter <index> Index of message in selected memory <mem1> <da> Destination address in string format <toda> Format of destination address <mr> Message reference Response If sending is successful: +CMSS: <mr> If sending is not successful: +CMS ERROR: <err>

AT+CMGW		Write an SMS to the SMS memory	
Test command AT+CMGW=?	Response OK		
Write command If PDU mode (+CMGF=0) AT+CMGW=<length>[,<stat>]<CR>PDU is given <ctrl-Z/ESC>	Parameter <length> <stat> <pdu> <index>	Length of PDU See command +CMGL See "AT+CMGL" Index of message in selected memory <mem1>	Response +CMGW: <index> +CMS ERROR: <err>

AT+CMGD		Delete an SMS in the SMS memory	
Test command At+CMGD=?	Response OK		
Write command AT+CMGD= <index>	Parameter <index>	Index of message in the selected memory <mem1>	Response OK/ERROR/+CMS ERROR

AT+CSCB		Select cell broadcast messages	
Test command AT+CSCB=?	Response +CSCB: (list of supported <mode>s)	Parameter <mode>	0 Accepts messages that are defined in <mids> and <dcss> 1 Does not accept messages that are defined in <mids> and <dcss>
Read command AT+CSCB?	Response +CSCB: <mode>,<mids>,<dcss>	Parameter <mode> <mids> <dcss>	See Test command String type; combinations of CBM message IDs String type; combinations of CBM data coding schemes
Write command AT+CSCB=[< mode>[,<mids >[,<dcss>]]]			

AT+CMGC		Send an SMS command	
Test command AT+CMGC=?	Response OK		
Write command If PDU mode (+CMGF=0) +CMGC=<length><CR>PDU is given <ctrl-Z/ESC>	Parameter <length> <pdu> <mr>	Length of PDU See "AT+CMGL" Message reference	Response If sending is successful: +CMGC: <mr> If sending is not successful: +CMS ERROR: <err>

1.3.3. User-Defined Commands for Controlling the GSM Mobile Phone

Since user-defined commands cannot be implemented according to official syntax, the character string "+C" is replaced by "^S" ("^" = 0x5E). For the future: if a user-defined command is accepted in the same syntax in GSM recommendations, the command can be addressed using both command strings.

AT^SPBS	Select a telephone book (including Siemens-specific books)
Test command AT^SPBS=?	Response ^SPBS: (list of supported <sto>s) OK/ERROR/+CME ERROR Parameter <sto> "FD" SIM fix-dialing telephone book "SM" SIM telephone book "ME" Telephone book in device "DC" ME Dialed Calls List "ON" Own telephone numbers "LD" SIM last dialing number "MC" ME Missed Calls List "RC" ME Received Calls List "MD" Last number redial memory in telephone device "OW" Own numbers "BD" Barred dialing numbers "SD" Service dialing numbers "MS" Missed dialing numbers (unanswered calls) "CD" Callback dialing numbers (answered calls) "BL" Blacklist dialing numbers (barred numbers from remote) "MB" Mailbox dialing numbers (network-operator mailbox) "CS" Common sortable telephone book (sorted combination of "SM", "ME", "FD"; access only via ^SPBC, ^SPBC) "RD" Red book (all entries in "CS" whose name portions have an exclamation point (!) as the final character) *For a description of the telephone-book features, see Appendix A
Read command AT^SPBS?	Response ^SPBS: <sto> OK/ERROR/+CME ERROR Parameter <sto> See Test command
Write command AT^SPBS= <sto>	Parameter <sto> See Test command Response OK/ERROR/+CME ERROR

AT^SDLD	Delete the "last number redial" memory
Test command AT^SDLD=?	Response OK
Execute command AT^SDLD	Response OK/ERROR/+CME ERROR

AT^SPBC	Seek the first entry in the sorted telephone book which begins with the selected (or next available) letter
Test command AT^SPBC=?	Response ^SPBC: (list of sorted telephone books supported <mem>s) See AT+CPBS/AT^SPBS OK/ERROR/+CME ERROR
Write command AT^SPBC=<char> ar>	Parameter <char> First letter of sought entry "A" to "Z" (with any other character, the index of the first entry that begins with a special character is sent back) <index> Index in the sorted telephone book (access via AT^SPBG) Response ^SPBC: <index> OK/ERROR/+CME ERROR

AT^SPBG	Read entry from the sorted telephone book via the sorted index
Test command AT^SPBG=?	Response ^SPBG: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR Parameter <index> Location number <nlength> Max. length of telephone number <tlength> Max. length of the text corresponding to the number
Write command AT^SPBG= <index1> [, <index2>]	Response ^SPBG: <index1>, <number>, <typ>, <text>[<CR><CL> ^SPBG: ^SPBG: <index2>, <number>, <typ>, <text>] OK/ERROR/+CME ERROR Parameter <index1> Location number where the read of the entry starts <index2> Location number where the read of the entry ends <number> Telephone number <typ> Type of number <text> Text corresponding to the telephone number

AT^SLCK	Switch locks (including user-defined locks) on and off
<p>Test command AT^SLCK=?</p>	<p>Response ^SLCK: (list of supported <fac>s) OK/ERROR/+CME ERROR</p> <p>Parameter <fac></p> <ul style="list-style-type: none"> "PS" Phone locked to SIM (device code) "SC" SIM card (PIN) "FD" FDN lock "AO" BAO (bar all outgoing calls) "OI" BOIC (bar outgoing international calls) "OX" BOIC-exHC (bar outgoing international calls except to home country) "AI" BAIC (bar all incoming calls) "IR" BIC-Roam (bar incoming calls when roaming outside the home country) "AB" All barring services "AG" All outgoing barring services "AC" All incoming barring services <ul style="list-style-type: none"> "PN" Network personalization (GSM 02.22) "PC" Corporate personalization (GSM 02.22) "PU" Network subset personalization (GSM 02.22) "PP" Service provider personalization (GSM 02.22) "PF" Phone locked to very first inserted SIM
<p>Write command AT^SLCK = <fac>, <mode> [,<passwd> [,<class>]]</p>	<p>Parameter</p> <ul style="list-style-type: none"> <fac> See Test command <mode> 0 Cancels lock 1 Activates lock 2 Queries lock status <passwd> Password <class> 1 Voice 2 Data 4 Fax 7 All classes (default value) <p>Response If <mode>=2 and command is successful ^SLCK: <status>[,<class1>[<CR><LF> ^SLCK: <status>, class2....]]</p> <p>Parameter</p> <ul style="list-style-type: none"> <status> 0 Off 1 On <p>OK/ERROR/+CME ERROR</p>

AT^SPWD	Change password to a lock (including user-defined locks)
<p>Test command AT^SPWD=?</p>	<p>Response ^SPWD: list of supported (<fac>, <pwdlength>)s OK/ERROR/+CME ERROR</p> <p>Parameter <fac> "P2" PIN2 otherwise See Test command for the command AT^SLCK, without "FD" <pwdlength> Length of password</p>
<p>Write command AT^SPWD = <fac>,<oldpwd>, <newpwd></p>	<p>Parameter</p> <ul style="list-style-type: none"> <fac> See Test command for the command AT^SLCK <oldpwd>, <newpwd> Old and new password <p>Response OK/ERROR/+CME ERROR</p>

AT^SACM		Output ACM (accumulated call meter) and ACMmax	
Test command AT^SACM=?	Response ^SACM: (list of supported <n>s)		
Execute command AT^SACM	Response ^SACM: <n>,<acm>,<acm_max> OK/ERROR/+CME ERROR	Parameter	
		<n>	See Test command
		<acm>	Accumulated call meter
		<acm_max>	Maximum accumulated call meter
Write command AT^SACM=<n>	Parameter		
		<n>	0 Suppresses the unexpected message 1 Outputs the unexpected message

AT^SPLM		Read the PLMN list	
Test command AT^SPLM=?	Response OK		
Execute command AT^SPLM	Response ^SPLM:numeric <oper>,long alphanumeric <oper><CR><LF> ^SPLM:..... OK/ERROR/+CME ERROR	Parameter	
		<oper>	Network operator in numeric and alphanumeric notation

AT^SPLR		Read an entry from the preferred-operator list	
Test command AT^SPLR=?	Response ^SPLR: (list of supported <index>s) OK/ERROR/+CME ERROR	Parameter	
		<index>	Location numbers
Write command AT^SPLR=<index1> [, <index2>]	Response ^SPLR: <index1>, numeric <oper> ^SPLR: ^SPLR: <index2>, numeric <oper> OK/ERROR/+CME ERROR	Parameter	
		<index1>	Location number where the read of the entry starts
		<index2>	Location number where the read of the entry ends
		<oper>	Network operator in numeric form

AT^SPLW		Write an entry to the preferred-operator list	
Test command AT^SPLW=?	Response ^SPLW: (list of supported <index>s) OK/ERROR/+CME ERROR	Parameter	
		<index>	Location number
Write command AT^SPLW=<index>[, <oper>]	Parameter		
		<index>	Location number at which the entry is written
		<oper>	Network operator in numeric form
	Response OK/ERROR/+CME ERROR		

AT^SCNI	Output call number information
Test command AT^SCNI=?	Response OK
Execute command AT^SCNI	Response ^SCNI: 1[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 2[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 3[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 4[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 5[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 6[,<cs>[,<number>,<type>]]<CR><LF> ^SCNI: 7[,<cs>[,<number>,<type>]] OK/ERROR/+CME ERROR Parameter <cs> Call status of affiliated call number (first parameter) 0 Call on hold 1 Active call 2 Waiting call <number> Telephone number <type> Type of number

AT^SNFV	Set the volume
Test command AT^SNFV=?	Response ^SNFV: (list of supported <vol>s) Parameter <vol> Value range of volume (0 to 4) (0 low, ..., 4 max. volume; approx. 3 dB/level)
Read command AT^SNFV?	Response ^SNFV: <vol> Parameter <vol> See Test command
Write command AT^SNFV=<vol>	Parameter <vol> See Test command Response OK/ERROR

AT^SNFS	Select NF hardware
Test command AT^SNFS=?	Response ^SNFS: (list of supported <dev>s) Parameter <dev> 0 Cell phone mode 1 Handsfree
Read command AT^SNFS?	Response ^SNFS: <dev> Parameter <dev> See Test command Note: Volume should be temporarily set to „0“ before NF hardware is changed.
Write command AT^SNFS=<dev>	Parameter <dev> See Test command Response OK/ERROR

AT^SRTC	Set the ringing tone
Test command AT^SRTC=?	Response ^SRTC: (list of supported <type>s), (list of supported <vol>s) Parameter <type> 0-X Number of ringing tone 0 Mutes the ringing tone; when MTC is set, the phone does not ring and the volume is ignored <vol> 1-Y Volume of ringing tone
Read command AT^SRTC?	Response ^SRTC: <type>, <vol>, <ringing> Parameter <type> See Test command <vol> See Test command <ringing> 0 Test-ring is switched off 1 Test-ring is switched on
Write command AT^SRTC=[<type>] [,<vol>]	Parameter <type> See Test command <vol> See Test command Response OK/ERROR
Execute command AT^SRTC	Response The ringing tone sounds on the current NF device; it is selected using "AT+CNFS" until AT^SRTC is called up again OK/ERROR/+CME ERROR Note: If an MTC arrives while the test-ring is active, the latter is switched off and the "normal" ring is switched on.

AT^SCID	Output card ID
Test command AT^SCID=?	Response OK/ERROR/+CME ERROR
Execute command AT^SCID	Response ^SCID: <cid> OK/ERROR/+CME ERROR Parameter <cid> Number of SIM card

AT^SCKS	Output SIM card status
Test command AT^SCKS=?	Response ^SCKS: (list of supported <n>s) Parameter <n> 0 Suppresses the unexpected messages 1 Outputs the unexpected messages
Read command AT^SCKS?	Response ^SCKS: <n>, <m> Parameter <m> 0 No card 1 Card in card reader
Write command AT^SCKS=<n>	Parameter <n> See Test command Response OK/ERROR
	Unexpected message ^SCKS: <m> See Read command

AT^SPIC	Output PIN counter
Test command AT^SPIC=?	Response OK/ERROR/+CME ERROR
Execute command AT^SPIC	Response ^SPIC: <counter> OK/ERROR/+CME ERROR Parameter <counter> Number of tries still available to enter the <passwd. The command "AT+CPIN?" must be used to check which password is currently needed.

AT^SMGO	SMS overflow indicator
Test command AT^SMGO=?	Response ^SMGO: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter <n> 0 Disable 1 Enable
Read command AT^SMGO?	Response ^SMGO: <n>,<mode> OK/ERROR/+CME ERROR
	Parameter <n> See Test command <mode> 0 Space still available 1 SMS buffer is full (chip card) 2 Buffer is full and new message that should be sent to the telephone is present in the SC
Write command AT^SMGO=<n>	Parameter <n> See Test command Response OK/ERROR/+CME ERROR
	Unexpected message ^SMGO: <mode> See Read command

AT^SMGL		List SMS (without status change from <i>unread</i> to <i>read</i>) Revision according to GSM 07.05 Version 4.7.0
Test command AT^SMGL=?	Response ^SMGL: (list of supported <stat>s)	Parameter <stat> 0 "REC UNREAD": received unread messages (default) 1 "REC READ": received read messages 2 "STO UNSENT": stored unsent messages 3 "STO SENT": stored sent messages 4 "ALL": all messages
Write command AT^SMGL [=<stat>]	Parameter <stat>	See Test command
	Response	If PDU mode (+CMGF=0) and command is successful: ^SMGL: <index>,<stat>,[<alpha>],<length> <CR><LF><pdu> [<CR><LF>^SMGL: <index>,<stat>,[alpha],<length> <CR><LF><pdu> [...]]
	Parameter <pdu>	The PDU begins with the service-center address (according to GSM04.11), followed by the TPDU according to GSM03.40 in hexadecimal format otherwise: +CMS ERROR: <err>

AT^SMSO		Switch device off
Test command AT^SMSO=?	Response	OK
Execute command AT^SMSO	Response	OK Device switches off

AT^SLNG		Language settings
Test command AT^SLNG=?	Response ^SLNG: (list of supported languages <lng>s)	Parameter: <lng>: Integer; language coded according to GSM 03.38 or mobile-specific language (>100)
Read command AT^SLNG?	Response ^SLNG: <lng>	
Write command AT^SLNG=<lng>	Response	OK/ERROR/+CME ERROR

AT^SSTK	SIM Toolkit
Test command AT^SSTK=?	Response ^SSTK: <profile> Parameter: <profile> ME profile according to GSM 11.14
Write command AT^SSTK=<length>[,<mode>]<CR> PDU is given <ctrl-Z/ESC>	Response: OK/ERROR/CME ERROR Parameter: <length>: Length of PDU in bytes <mode>: 0: Single command 1: Sequence of commands SIM Toolkit commands, see GSM 11.14 <pdu>: SIM Toolkit commands, see GSM 11.14 Limitation: The maximum PDU length is 176 bytes.

AT^SBNW	Binary Write
Test command AT^SBNW=?	Response ^SBNW: ((list of supported <types>s, list of supported <subtype>s)) OK/ERROR/+CME ERROR Parameter: <type> „bmp“ bitmap Windows bitmap format without compression; 2/16/256 colours, at least 97x26 pixels „mid“ ring tones in standard MIDI format 0, without polyphony specification: http://www.midi.org „vcs“ vcal format specification: http://www.imc.org/pdi <subtype> 0 first entry of type <type> 1 second entry of type <type> ... <actNumber> 0 deletes entry of the act. subtype other actual packet number <maxNumber> maximum number of packets
Write command AT^SBNW=<type>,<subtype>,[<actNumber>],[<maxNumber>]<CR> PDU is given <ctrl-Z/ESC>	Response OK/ERROR/+CME ERROR Parameter: <type> see Test commnd <subtype> see Test commnd <actNumber> see Test commnd <maxNumber> see Test commnd

Note:

-It is not possible to upload data when a call is active or in progress.

If a call is active the mobile responses with +CME ERROR: PHONE BUSY and the actual upload sequence is aborted and all data packets are discarded.

-If uploaded data is not useable (e.g. wrong data format) the mobile responses with +CME ERROR: INV CHAR IN TEXT after the last packet is uploaded.

-To get the extended +CME-ERROR-responses AT+CMEE=2 has to be sent before. Otherwise the mobile responses only with ERROR . (see GSM07.07)

-If <actNumber> and <maxNumber> during the upload are omitted, the mobile aborts the whole input sequence for the current subtype.

-If <actNumber> is 0 during the upload and <maxNumber> is omitted, the mobile deletes the actual record with index <subtype>

-Packets have to be uploaded in the right order!

-Limitation:The maximum pdu size is 176 bytes (or 352 characters)

See Appendix B for examples.

AT^SBNR	Binary Read
<p>Test command AT^SBNR=?</p>	<p>Response ^SBNR: (list of supported <types>s, (list of supported <subtype>s)) OK/ERROR/+CME ERROR</p> <p>Parameter: <type> see AT^SBNW command <subtype> see AT^SBNW command</p>
<p>Write command AT^SBNR=<type>,<subtype></p>	<p>Response ^SBNR: <type>,<subtype>,1,<maxNumber> <CR><LF><data><CR><LF> ^SBNR: <type>,<subtype>,2,<maxNumber> <CR><LF><data><CR><LF>[...] OK/ERROR/+CME ERROR</p> <p>Parameter: <type> see AT^SBNW command <subtype> see AT^SBNW command <data> data in hexadecimal form (PDU) <maxNumber> see AT^SBNW command</p> <p><i>See Appendix B for examples.</i></p>

1.3.4. Summary of All Unexpected Messages

Message	Meaning
+CREG: <stat>	Power status
+CLIP: <num>	Telephone number of caller
+CMTI: <mem>,<index>	Indication of a new short message
+CMT: ,<length><CR><LF> <pdu>	Short message
+CSSI: <code1> +CSSU: <code2>	Supplementary service intermediate/unsolicited result code
^SMGO: <mode>	SMS overflow indicator
^SCKS: <m>	Message indicating whether card has been removed or inserted
^SACM: <m>	Message indicating if ACM has reached the maximum value ACMmax

Appendix A

Features of the Telephone-Book Memory

Name	Description	Category / Access	Write	Delete completely
FD	Fix-dialing number (SIM fix-dialing telephone book)	GSM 07.07 / +CPBS or ^SPBS	Allowed (PIN2 required)	
SM	Abbreviate dialing number (SIM telephone book)	GSM 07.07 / +CPBS or ^SPBS	Allowed (device code required if FDN replacement is active)	
DC (MD)	Mobile last dialing number (last number redial memory; only if "LD" is not available)	GSM 07.07 / +CPBS or ^SPBS	Not allowed	By means of AT^SDLD
ON (OW)	Own Numbers (SIM own telephone numbers)	GSM 07.07 (Siemens) / +CPBS (historical)	Allowed	
LD	SIM last dialing number (last number redial memory on SIM)	GSM 07.07 / +CPBS or ^SPBS	Not allowed	By means of AT^SDLD
ME	Mobile-equipment telephone book (ME dialing numbers)	GSM 07.07 / +CPBS or ^SPBS	Allowed (device code required if FDN replacement is active)	
BD	Barred dialing numbers (blocked numbers)	Siemens / ^SPBS	Not allowed	
SD	Service dialing numbers (Service numbers)	Siemens / ^SPBS	Not allowed	
MC (MS)	Missed dialing numbers (unanswered calls)	GSM 07.07 (Siemens) / +CPBS, ^SPBS	Not allowed	
RC (CD)	Callback dialing numbers (answered calls)	GSM 07.07 (Siemens) / +CPBS, ^SPBS	Not allowed	
BL	Blacklist dialing numbers (numbers that are blocked for a certain time in order to prevent continuous accesses from remote)	Siemens / ^SPBS	Not allowed	

	control)			
MB	Mailbox dialing numbers (network-operator mailbox)	Siemens / ^SPBS	Not allowed	
CS	Common sortable numbers (sorted combination of "SM", "ME", "FD")	Siemens / ^SPBS /^SPBC / ^SPBG	Not allowed	
RD	Red book numbers (“CS” entries with ‘!’ at the end of the name portion)	Siemens / ^SPBS /^SPBC / ^SPBG	Not allowed	

Writing to the FDN Phonebook / FDN Replacement

Writing to the fix-dialing number phonebook is protected by PIN2.
A Write sequence (to e.g. record 5) runs as follows:

```

AT+CMEE=2 //Activate expanded error message
OK

AT+CPBS=? // Listing of available telephone books
+CPBS: "FD","SM","LD"
OK

AT+CPBS="FD" // Selection of the FDN telephone book
OK

AT+CPBW=5,1234,,"test" // A Write to record 5 is attempted...
+CME ERROR: SIM PIN2 REQUIRED // ... PIN2 is required for this purpose

AT+CPIN? // Query of the PIN status...
+CPIN: SIM PIN2 // ... PIN2 is to be entered

AT+CPIN=12345678 // Input of PIN2
OK

AT+CPBW=5,1234,,"test" // A Write to record 5 is attempted...
OK // PIN2 remains active as long as you use the commands
// RCCL3_CMD_CPIN, RCCL3_CMD_CPBS,
// RCCL3_CMD_CPBR, RCCL3_CMD_CPBW,
// RCCL3_CMD_SPIC.
// If you use other commands or if none of the
// above commands are executed within five
// minutes, the validity of PIN2 is voided.

AT+CPBW=6,5678,,"new test" // A Write to record 6 is attempted...
OK

```

...

In addition, if there is no FDN phonebook available on the SIM, it is possible to activate a feature which activates FDN-like behavior for the "SM" and "ME" phonebooks (FDN replacement). (Currently this feature can only be activated via the MMI lock/device lock/excluding telephone book.)

In this case, the Write to the "SM" and "ME" phonebooks is ensured by the device code (PH-SIM PIN and PH-SIM PUK, respectively).

The sequence for entering the device code is analogous to the above example.

Special hints for using +CPBR/+CPBW command

String parameters ,like the <text> in +CPBW command shall be entered using quotation marks `"` (Ascii=Windows=GSM=0x22).e.g. "Doe Joe"

It is possible to enter string parameters without `` but not recommended, because following problems may occur:

If no `` are used:

- SPACeS (Space, Blank, Ascii=Windows=GSM=0x20) are skipped.
 - E.g. at+cpbw=1,123,,K. H. results in "K.H." ☹
 - at+cpbw=1,123,,"K. H." SPACeS are kept ☺

- No `;` (Ascii=Windows=GSM=0x2C) and ` `;` (Ascii=Windows=GSM=0x3B) in <text> is possible, because these characters are used as separator of parameters/commands.
 - E.g. at+cpbw=1,123,,Kurz,Helmut result in ERROR ☹
 - at+cpbw=1,123,,"Kurz,Helmut" ☺

But there are also some points to note when using quotation marks ``:

There are some characters which cannot be entered in normal way:

e.g. quotation mark `` character itself, because this is interpreted as the end of the <text>

To make this (and some other special characters) possible to be entered, the character with hex value 0x5c is used as escape character. In the ASCII character set this is equal to the `` (like proposed in V.25ter).

(Ascii=Windows=0x5C, GSM hat keinen 'backslash')

Unfortunately there is no `` in GSM character set. The 0x5C equals to the `Ö`

The escape sequence has the following structure:

- The sequence begins with the escape character 0x5C (ASCII=Windows=`, GSM=`Ö`)
- The special character follows and is entered as 2 Byte representation of the GSM character set value .
 - e.g. the 2 Byte representation of the `@` (GSM=0x00) is `00`

Following special characters shall be entered by using the escape sequence:

GSM Char	Hex char.	ASCII	GSM Esc Seq	Seq.(hex)	Note
Ö	5C	\	Ö5C	5C 35 43	Backslash
"	22	"	Ö22	5C 32 32	String delimiter
ö	08	BSP	Ö08	5C 30 38	Backspace
@	00	NULL	Ö00	5C 30 30	GSM NULL

Examples:

GSM string wanted in Phonebook	String in AT+CPBW Command(GSM)	String in AT+CPBW Command (Hex)
Ölhändler	"Ö5ClhÖ7Bndler"	22 5C 35 43 6C 68 7B 6E 64 6C 65 72 22
"Eddi" Kurz	"Ö22EddiÖ22 Kurz"	22 5C 32 32 45 64 64 69 5C 32 32 20 4B 75 72 7A 22
Oòo	"OÖ08o"	22 4F 5C 30 38 6F 22
@Adr.	"Ö00Adr."	22 5C 30 30 41 64 72 2E 22
	"@Adr."	[no problems with strlen()] 22 00 41 64 72 2E 22 [may cause problems with strlen() in application]

Note:
When reading phonebook records, there is NO replacement. Every character will appear in normal GSM character set notation (like the left column in the example above).

Appendix B

Example for creating/interrogation of an organizer entry

-vcs object which has to be uploaded:

```
BEGIN:VCALENDAR
VERSION:1.0
BEGIN:VEVENT
CATEGORIES:ANNIVERSARY
DTSTART:19991213T100000
DESCRIPTION:W. von Siemens
END:VEVENT
END:VCALENDAR
```

-hexadecimal representation of this object:

```
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A42454
7494E3A564556454E540D0A43415445474F524945533A414E4E49564552534152
590D0A445453544152543A3139393931323133543130303030300D0A4445534352
495054494F4E3A572E20766F6E205369656D656E730D0A454E443A564556454E5
40D0A454E443A5643414C454E4441520D0A
```

-upload of an entry on record 20

```
at^sbnw="vcs",20,1,3<CR>
<CR><LF> > <Space>
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A42454
7494E3A564556454E540D0A43415445474F<Ctrl-Z>
<CR><LF>OK<CR><LF>
```

```
at^sbnw="vcs",20,2,3<CR>
<CR><LF> > <Space>
524945533A414E4E49564552534152590D0A445453544152543A31393939313231
33543130303030300D0A44455343524950<Ctrl-Z>
<CR><LF>OK<CR><LF>
```

```
at^sbnw="vcs",20,3,3<CR>
<CR><LF> > <Space>
54494F4E3A572E20766F6E205369656D656E730D0A454E443A564556454E540D
0A454E443A5643414C454E4441520D0A<Ctrl-Z>
<CR><LF>OK<CR><LF>
```

All characters are answered with an echo.

Echoing can be switched off with „ATE0“.

In this example the organizer entry is uploaded in 50 bytes packets (100 input characters in every pdu).

The blue painted characters characterize the responses of the mobile.

-interrogation of the current <type>,<subtype>,<actNumber>,<maxNumber>

```
at^sbnw?<CR>
<CR><LF>^SBNW: "vcs",20,2,3<CR><LF>
<CR><LF>OK<CR><LF>
```

description: The actual object which is uploaded is an VCS object.
It has to be stored on record 20.
2 of 3 packets are already uploaded.

-deleting of record 20

```
at^sbnw="vcs",20,0<CR>
<CR><LF>OK<CR><LF>
```

-download entry from record 20

```
at^sbnr="vcs",20<CR>
<CR><LF>^SBNR:<space>"vcs",20,1,1<CR><LF>
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A42454
7494E3A564556454E540D0A43415445474F524945533A414E4E49564552534152
590D0A445453544152543A3139393931323133543130303030300D0A4445534352
495054494F4E3A572E20766F6E205369656D656E730D0A454E443A564556454E5
40D0A454E443A5643414C454E4441520D0A<CR><LF>
<CR><LF>OK<CR><LF>
```

The mobile segments the record entry in 176 byte (=176*2 characters) packets.

-Download of an empty record 20

```
at^sbnr="vcs",20<CR>
<CR><LF>OK<CR><LF>
```

-Test command of AT^SBNW

```
at^sbnw=?<CR>
<CR><LF>^SBNW:<space>("bmp",(0)),(,"mid",(0)),(,"vcs",(1-30)) <CR><LF>
<CR><LF>OK<CR><LF>
```

description: The mobile supports bitmaps with suptype 0, midi objects with suptype 0 and vcs objects with the suptypes 1 up to 30.